



Your Roof. For Life.™

5V



Description

For generations, 5V roofing panels have been used on farm buildings and other rural projects. Today, many homeowners have recognized that the timeless design is ideal for homes as well. Our 5V panels are especially popular in Florida and other coastal areas. Designed with an enhanced "U" over "V" profile to provide maximum leak resistance.

Gauges


- Utility, 29, 26

Finish Options

- 9 Paint Colors
- Energy Star Certified Colors Available
- Unpainted Galvalume
- Unpainted Galvanized

Approvals and Certifications

- Metal Construction Association Certified
- Miami-Dade Approved for Wind Uplift
- Florida Building Code Approved
- Energy Star Certified
- Texas Department of Insurance Approved
- Highest UL Ratings for Wind Uplift, Fire and Impact Resistance

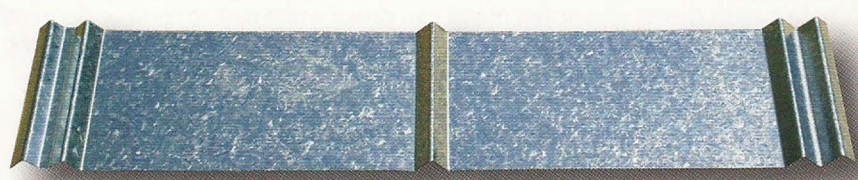

CERTIFICATIONS & TESTING

- Dade County NOA #07-1114.01
- Florida Building Code Approval #FL4586.1, #FL6895.2, #FL7271.1
#FL7765.1, #FL9610.1
- Texas Department of Insurance Approval #119
- UL 790 Fire Resistance Class 4
- UL 2218 Impact Resistance Class 4
- UL 580 Uplift UL Class 90 CONSTRUCTION #579

ALLOWABLE UNIFORM LOADS PER SQUARE FOOT

Maximum purlin spacing for roof 2' on center and maximum girt spacing for sidewall 3' on center. Place fasteners in the pan of panel for best results. (Three spans or more)


SPAN (INCHES)	LIVE LOAD (lb/ft ²)							WIND LOAD (lb/ft ²)						
	12"	15"	18"	21"	24"	30"	36"	12"	15"	18"	21"	24"	30"	36"
29 Gauge	146	93	64	47	36	23	16	200	128	89	65	50	32	22
26 Gauge	200	128	89	65	50	32	22	267	170	118	87	66	42	29

NOTES:

1. Theoretical allowable loads are based on section properties and allowables calculated in accordance with 2001 AISI Specifications.
2. Theoretical allowable loads are based on three or more uniform spans.
3. For roof panels, deduct self weight for actual 'live load' capacity of the panel.
4. These loads are for panel strength. Frames, purlins, decks and fasteners must be designed to resist all loads imposed on the panel.
5. Check local building codes if panel testing is required.

RECOMMENDED FASTENING PATTERN FOR 1-1/2" SCREWS

PANEL OVERLAP

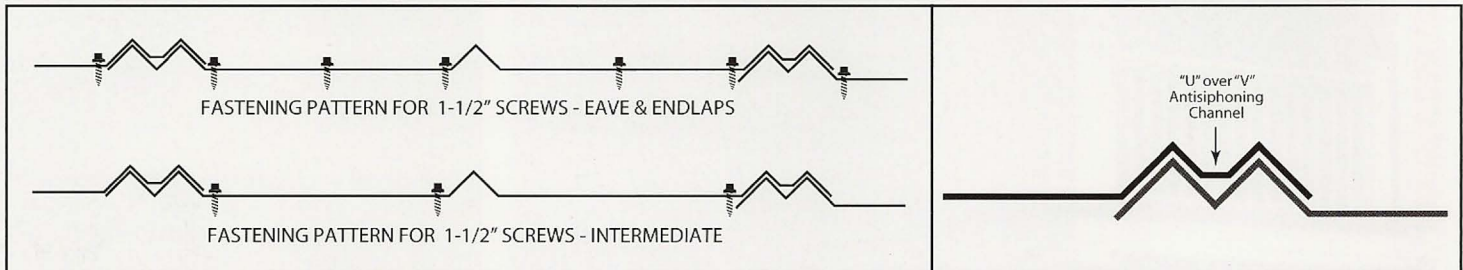

STORAGE

If the panels are not to be used immediately, store inside in a well ventilated and dry location. Condensation or other moisture can form between the sheets during storage causing water stains or white rust which detract from the appearance of the product and may effect the product's useful life. Trapped moisture between sheets of painted metal can cause white rust to form underneath the paint. This can cause the paint to flake off of the panel immediately or several years later. To prevent white rust and staining, the following precautions should be taken:

1. Break the shipping bands on the metal and wipe the sheets dry.
2. Store metal on end or on an incline of at least 8" with support bands underneath to prevent sagging.
3. Fan sheets slightly at the bottom to allow for air circulation.
4. Keep the sheets off of the ground with an insulator such as wood.

Any outdoor storage is at the customer's own risk. If outdoor storage cannot be avoided, protect the metal using a canvas cover or waterproof paper. Never cover the metal with plastic as this will cause condensation to form.

BEFORE BEGINNING INSTALLATION OF THIS PRODUCT, READ OUR INSTALLATION INSTRUCTIONS.